

 




DLY+: To increase Time Delay DLY-: To decrease Time Delay

SNS+: To increase Senitivity level SNS-: To decrease Senitivity level

SEC+ENTER: To Enable Security Mode SEC+EXIT: To Disable Security Mode



### **BRIGHTNESS**

**SENSITIVITY** 

**SECURITY** 

This mode is used to provide on-demand lighting. User can select three different mode of the sensor. 'Always OFF' mode indicated by RED color LED indication; 'Always ON' mode indicated by GREEN color LED indication; 'Auto' mode indicated by YELLOW color LED indication.



### **FACTORY RESET**

**On-Demand Mode** 

FR+ENTER: Factory settings FR+EXIT: Remote Settings



### LOCK/UNLOCK

LOCK+ENTER: To Lock Remote LOCK+EXIT: To UnLock Remote





























### **Business Office:**

Ocelli Systems Private Limited, 2/8, First Floor, 80 Feet Road, Indiranagar, Bangalore - 560038

Tel: 080-4152-3012 E-mail: support@ocellisystems.com

www.ocellisystems.com

Proud to Make in INDIA



**Coverage Test** 









Visual Cue







Sense Command Control

ThirdEye Energy Saving Sensors

Sense Command **Control** 

# **Ceiling Sensor**

### **Variants**

IOCHCW-WR1 / IOFHCW-WR1 Occupancy and Light Sensor

IVCHCW-WR1 / IVFHCW-WR1 Vacancy and Light Sensor

ITCHCW-WR1 / ITFHCW-WR1 ThreeWay and Light Sensor

INCHCW-WR1 / INFHCW-WR1 Occupancy Only Sensor

ILCHCW-WR1 / ILFHCW-WR1 Light Only Sensor

ICCHCW-WR1 Cascade and Light Sensor

### **Ceiling Sensor**

Coverage Area: 450 Sq.ft



### **Preferred Install Locations**

Suitable for Individual Cabins, Rest Rooms, Stairs, WareHouses, Residential







**HighBay Sensor** 

Coverage Area: 5000 Sq.ft

Installation Height: 40 ft





## Variants

IOWHCW-WR1 Occupancy and Light Sensor

IVWHCW-WR1 Vacancy and Light Sensor

ITWHCW-WR1 ThreeWay and Light Sensor

ICWHCW-WR1 Cascade and Light Sensor

INWHCW-WR1 Occupancy Only Sensor

ILWHCW-WR1 Light Only Sensor

### Wall Sensor

Coverage Area: upto 75 ft



Installation Height: 6.8 ft

### **Preferred Install Locations**

Suitable for Lobbies , Waiting Rooms, Class rooms. Individual Cabins, Rest Rooms, Meeting Hall









**Corridor Sensor** 



Coverage Area: upto 75 ft

Installation Height: 6.8 ft





# **Socket Sensor**

## **Variants**

IOSHCW-WR1 Occupancy and Light Sensor

IVSHCW-WR1 Vacancy and Light Sensor

ITSHCW-WR1 ThreeWay and Light Sensor

ICSHCW-WR1 Cascade and Light Sensor

INSHCW-WR1 Occupancy Only Sensor

ILSHCW-WR1 Light Only Sensor



### **Socket Sensor**



Coverage Area: upto 32 ft



Installation Height: 6.8 ft

### **Preferred Install Locations**

Suitable for Corridors, Warehouses, High bay spaces, Gymnasiums, Distribution Centers









**O**celli<sup>®</sup>



















